



GOT CHOCK REPLACEMENT INSTRUCTIONS

1. *Remove blade assembly mounting bolt to disconnect blade assembly from drive rod. (Avoid damaging blades).*
2. *Pull drive rod out of tool through top.*
3. *Remove release chocks and drive chock, (the springs will be loose). Replace drive chocks and release chock while holding the springs in position.*
4. *Insert drive rod through top slot and work it through the chocks and springs and through bottom slot.*
5. *Connect blade assembly to drive rod.*